

Dishwasher Instructions

The dishwasher must be switched on 30 minutes before use to heat the water

This is a commercial dishwasher. Once the water has heated up its wash cycle is much quicker than the normal domestic dishwasher.

1. Press round button
2. Wait 30 minutes for the blue light to turn green.
3. Open door and fill trays.
4. Shut door and press green button to start wash.
The button turns blue when washing
5. When the button turns green the wash cycle is complete.
Press the button to open the door. Empty the dishwasher.
6. To use again follow steps 3 to 5
7. When finished with the dishwasher press the green button for 5 seconds until the drain light appears.
8. Once drained it will turn itself off.
9. When all lights have turned off, open the door and clean out the filter.